

ETE-625R

PROCEDURE:

1. Install one end of the ETE-625-R into one housing unit using 15 ft. / lbs. of torque.
2. Install the other end of the ETE-625-R into the second housing using 15 ft. / lbs. of torque.
3. Tighten the center nut of the ETE-625-R to approximately 30 ft. / lbs.
4. Tighten the seizing device inside housing for the center conductor.

